
Vision Sensor

Features

- Light integrated vision sensor
- Minimized image distortion with global shutter method
- Proprietary technology to block optical interference to improve optical performance (patent)
- Stronger in environment of vibration or impact with lens cover detachment prevention technology
- Various inspection function
 - : Alignment, brightness, contrast, area, edge, shape comparison, length, angle, diameter, object counting, color identification, area of color, object of color counting
- Inspection test with simulator
- Flexible response to changing work environment by setting 32 work groups (64 inspection items for each work group)
- Saving data to FTP server
- Free vision sensor program (Vision Master)
- : Inspection simulator, managing parameter and work group, monitoring inspection result, inspection result FTP transmission, multilingual support, Etc.
- Protection structure IP67 (IEC standard)






■ Manual

For the detail information and instructions, please refer to user manual, and be sure to follow cautions written in the technical description (catalog, website).

Visit our website (www.autonics.com) to download manuals.

Ordering Information

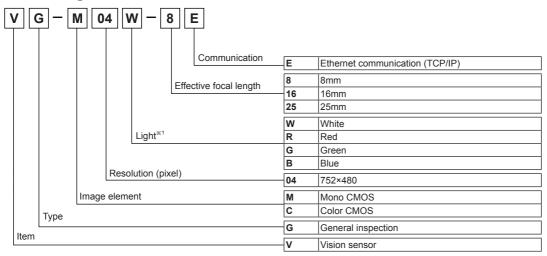

※1: Light can be purchased separately.



CONTROLLERS

SENSORS

MOTION DEVICES

SOFTWARE

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) LiDAR

(D) Door/Area Sensors

(E) Vision Sensors


(F) Proximity Sensors

(G) Pressure Sensors

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

■ Overall Configuration Diagram

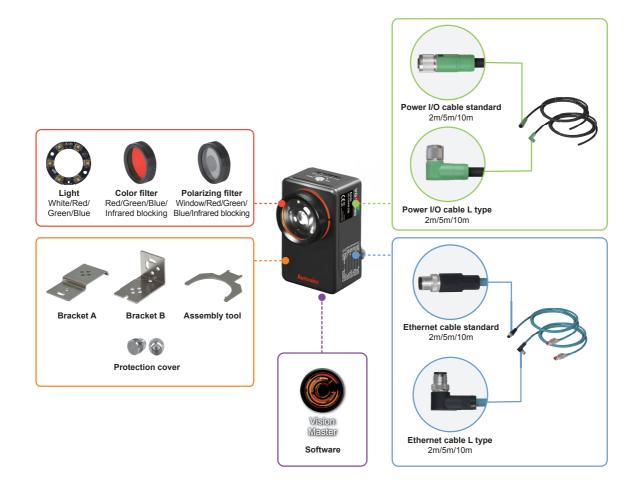

E-4 Autonics

Accessories

- Assembly tool
- ASST-VG



- O Bracket A
- BK-VG-A



SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(A) Photoelectric

(B) Fiber Optic

Sensors

(C) LiDAR

(D) Door/Area

Sensors

(F) Proximity Sensors

Pressure Sensors

(H) Rotary Encoders

(I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

Sensors

Sold Separately

- Clight
- LR-W-06-VG (white)
- LR-R-06-VG (red)
- LR-G-06-VG (green)
- LR-B-06-VG (blue)



- O Bracket B
- BK-VG-B



- Panel PC
- APC-1011



- Protection cover
- P96-M12-1



※Protection cover protects the unused connector from foreign object. When installing, hand tighten.

- O Color filter
- FL-R-VG (red)
- FL-G-VG (green)
- FL-B-VG (blue)
- FL-IC-VG (infrared blocking)



- O Polarizing filter
- FL-P-VG (window) FL-RP-VG (red)
- FL-GP-VG (green)
 FL-BP-VG (blue)
- FL-ICP-VG (infrared blocking)





- O Power I/O cable
- Standard CID-2-VG (2m) CID-5-VG (5m) CID-10-VG (10m)



- L type CLD-2-VG (2m) CLD-5-VG (5m) CLD-10-VG (10m)



- © Ethernet cable
- Standard CIR-2-VG (2m) CIR-5-VG (5m) CIR-10-VG (10m)



L type CLR-2-VG (2m) CLR-5-VG (5m) CLR-10-VG (10m)



F-5 **Autonics**

VG Series

Specifications

Мо	del	VG-M04□-8E	VG-M04□-16E	VG-M04□-25E	VG-C04□-8E	VG-C04□-16E	VG-C04□-25E				
Effe	ective focal length	8mm	16mm	25mm	8mm	16mm	25mm				
Min	. working distance	50mm	100mm	200mm	50mm	100mm	200mm				
٥٥ ⁻	ver supply	24VDC== (±10%)									
Cur	rent consumption	1A									
ion	Inspection item		ness, contrast, are n, length, angle, d		shape comparis	Alignment, brightness*2, contrast*2, area*2, edge, shape comparison*2, length, angle, diameter, object counting*2, color identification, area of color, object of color counting					
Inspection	Work group	32	32								
<u>E</u>	Simultaneous inspection	64									
	Camera frame per second ^{*1}	Max. 60fps									
	Image filter	Preprocessing, ex	xternal filter (color	filter, polarizing filt	er)						
0	Image element	1/3 inch mono CN	MOS		1/3 inch color C	MOS					
snap	Resolution	752×480 pixel									
Эе	Camera frame per second ^{*1}	Max. 60fps									
_	Shutter	Global shutter									
	Exposure time	20 to 50,000μs									
ᆵ	ON/OFF method	Pulse	Pulse								
Light	Color	White, red, green, blue									
Γriς	ger mode	External trigger, internal trigger, free-run trigger									
Ħ	Signal	Rated input 24VDC== (±10%)									
Input	Туре	External trigger (TRIG), work group change (IN0 to IN3), alarm cleared (IN0 to IN3), encoder (IN2, IN3)									
	Signal	NPN or PNP open collector output Max. 24VDC 50mA, residual voltage: max. 1.2VDC									
Output	Туре	Control output (OUT0 to OUT3) : inspection completion, inspection result, external light trigger, alarm, camera busy, changing work group completed									
	FTP transmission	Possible									
ioO	mmunication	Ethernet (TCP/IP), 100BASE-TX/10BASE-T									
Pro	tection circuit	Output short over current protection circuit									
Ind	cator	Power indicator (POWER), Ethernet connection indicator (LINK), pass indicator (PASS): green LED Data transmission indicator (DATA): orange LED Failure indicator (FAIL): red LED									
Ins	ulation resistance	Over 20MΩ (at 500VDC megger)									
Die	lectric strength	500VAC 50/60Hz for 1 min									
Vib	ration	1.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 2 hours									
Sho	ock	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times									
Enν	riron Ambient temp.	0 to 45°C, storage: -20 to 70°C									
me	nt Ambient humi.	35 to 85%RH, sto	o 85%RH, storage: 35 to 85%RH								
Pro	tection structure	IP67 (IEC standard)									
Ma	terial	Case: aluminum, lens cover/focus adjuster: polycarbonate, cable: polyurethane									
Acc	essories	Assembly tool, bracket A, mounting screw: 2									
Sol	d separately	Light, color filter, p	polarizing filter, po	wer I/O cable, Eth	ernet cable, brack	ket B, protection co	ver, panel PC				
App	proval	C€ เเ					,				
١٨/-	ight ^{*3}	Approx. 415g (approx. 273g)	Approx. 416g (approx. 274g)	Approx. 416g (approx. 274g)	Approx. 415g (approx. 273g)	Approx. 416g (approx. 274g)	Approx. 416g (approx. 274g)				

 $[\]times$ 1: The number of camera frames per second can be different by image setting or inspection item.


E-6 Autonics

X2: These inspection items convert a color image to a mono color image to inspect data.

X3: The weight includes packaging. The weight in parenthesis is for unit only.

^{*}Environment resistance is rated at no freezing or condensation.

Connections

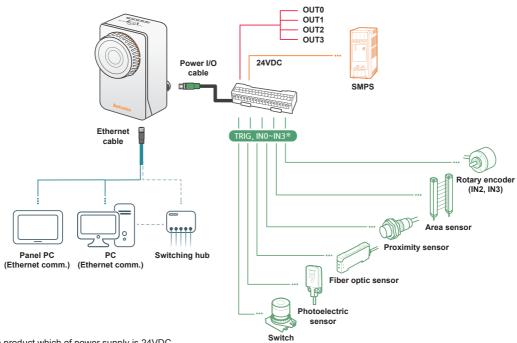

O Power I/O cable (M12 12-pin connector)

	•								
Pin arrangement	Pin No.	Cable color	Signal	Function					
	1	Brown	24VDC	24VDC					
	2	Blue	GND	GND					
	3	White	TRIG	Trigger input					
	4	Green	IN0	Work group change Bit 0	Work group change Clock				
	5	Pink	IN1	Work group change Bit 1	Work group change Data				
9 0 3	6	Yellow	IN2	Work group change Bit 2	Encoder - Up counter - Quadrature A	Alarm cleared			
069	8	Gray	IN3	Work group change Bit 3	Encoder - Down counter - Quadrature B				
	11	Gray/Pink	COMMON	COMMON					
	7	Black	OUT0						
	9	Red	OUT1	Inspection completion	Inspection completion, inspection result, external light trig				
	10	Purple	OUT2	alarm, camera busy,	changing work group	completed			
	12	Red/Blue	OUT3						

Ethernet cable (M12 8-pin/RJ45 connector)

Pin arrangement	M12 8-pin		Cable color	RJ45	
Fill alrangement	Pin No.	Signal	Cable Color	Pin No.	Signal
	6	RX+	White/Orange	1	TX+
	4	RX-	Orange	2	TX-
	5	TX+	White/Green	3	RX+
3 8 9	8	TX-	Green	6	RX-
	1	_	White/Blue	5	_
4 5 6	7	_	Blue	4	_
	2	_	White/Brown	7	_
	3	_	Brown	8	_

SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) LiDAR

(D) Door/Area Sensors

> E) /ision Sensors

(F) Proximity Sensors

(G) Pressure Sensors


(H) Rotary Encoders

(I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets


Autonics E-7

Input Circuit Diagram

External trigger input (TRIG)
 Work group change input (IN0 to IN3)
 Alarm cleared input (IN0 to IN3)




Encoder input (IN2, IN3)




Control Output Circuit Diagram


● NPN open collector output

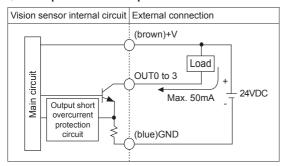

PNP open collector output

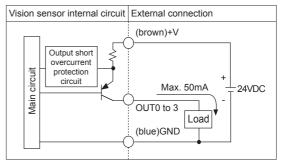

Unit Description

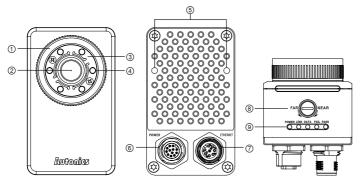



- ① Lens cover: Front cover of lens
- XIn case using a filter (color filter/polarizing filter), separate the lens cover with the assembly tool before insert the filter.
- ② Lens: There are 8mm, 16mm, 25mm models by effective focal length.
- 3 Light cover: Light cover fixes inner LED lights.
- Light: Inner LED lights
 - XIn order to change the light, separate lens cover and light cover.
- ⑤ Bracket mounting hole on back side: Install the vision master from the back side using bracket B.
- ② Ethernet connector: Connect the Ethernet cable. It is for TCP/IP communication.
- $\ensuremath{\underline{@}}$ Focus adjuster: After fixing vision sensor, adjust focus by rotating the focus adjuster.
- 9 Indicators


Indicators		Color	Descriptions
POWER	POWER Power indicator		Turns ON when power is supplied.
LINK	Ethernet connection indicator	Green LED	Turns ON when vision sensor is connected with PC
LIMIX	Ethernet connection indicator	GIEEN LLD	(Ethernet communication).
DATA	Data transmission indicator	Orange LED	Flashes when data is transmitted from vision sensor to PC.
FAIL	Failure indicator	Red LED	Flashes when detects failure during work group inspection.
PASS	Pass indicator	Green LED	Flashes when passed inspection during work group inspection.

E-8 Autonics

Dimensions

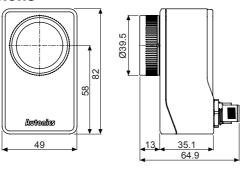

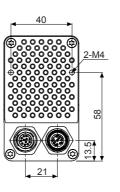



(unit: mm)

SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) LiDAR

(D) Door/Area Sensors

(F) Proximity Sensors


(G) Pressure Sensors

(H) Rotary Encoders

(I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets


Accessory

Bracket A (BK-VG-A)

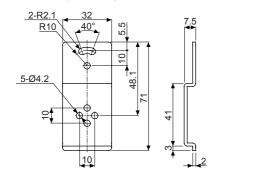



Sold separately

Bracket B (BK-VG-B)

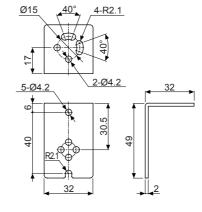


● Power I/O cable (M12 12-pin connector)






Type	Model	L
	CID-2-VG	2m
Standard	CID-5-VG	5m
	CID-10-VG	10m
	CLD-2-VG	2m
L type	CLD-5-VG	5m
	CLD-10-VG	10m

● Ethernet cable (M12 8-pin/RJ45 connector)





Туре	Model	L
	CIR-2-VG	2m
Standard	CIR-5-VG	5m
	CIR-10-VG	10m
	CLR-2-VG	2m
L type	CLR-5-VG	5m
	CLR-10-VG	10m

Autonics E-9

Installation

Installing vision sensor

- Checking working distance and FOV by effective focal length
- Bracket installation (fixing vision sensor)

Installing software

Installing the vision sensor program, Vision Master, to

Connecting vision sensor

Setting network from Vision Master


Adjusting vision sensor focus

- Running Vision Master and activating the 'Focusing Guide' function in the camera setting menu
- Adjusting focus with focus adjuster

Bracket installation


Install horizontally from the bottom

- bracket A (accessory)




Install vertically from the bottom

- bracket B (sold separately)




Install vertically from the back side - bracket B (sold separately)

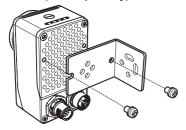

Installation position


Place the sensing target at the center of the vision sensor lens.

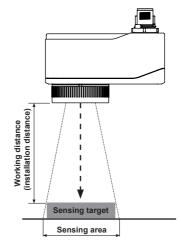

O Focus adjustment

After installing and running Vision Master, use the focusing guide function to adjust the focus.


Using (-) screwdriver, turn focus adjuster to right and left to adjust the focus.

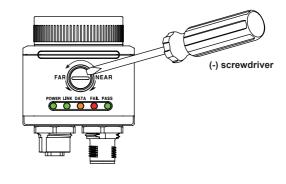

E-10 **Autonics**

■ Working Distance and FOV by Effective Focal Length

Working distance

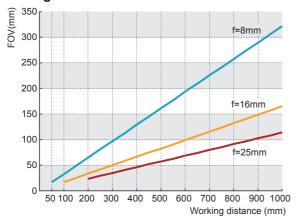

Effective focal length (f)	8mm	16mm	25mm
Min. working distance	50mm	100mm	200mm
Brightness	F2.0	F2.5	F2.5

(A) Photoelectric Sensors

SENSORS

CONTROLLERS

MOTION DEVICES

SOFTWARE

(B) Fiber Optic Sensors

(C) LiDAR

(D) Door/Area Sensors


(F) Proximity Sensors

(G) Pressure Sensors

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

O FOV (Field of view)

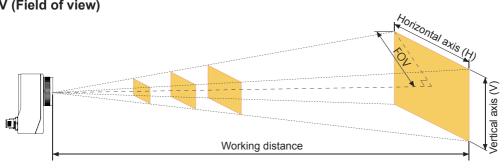

Sensing range by effective focal length (unit: mm)

Effective focal length	Working distance	50	100	200	300	400	500	600	700	800	900	1,000
	FOV	16	32	64	96	129	161	193	255	257	289	322
8mm	Horizontal axis (H)	27	54	108	163	217	271	325	380	434	488	542
	Vertical axis (V)	17	35	69	104	138	173	208	242	277	311	346
	FOV	_	16	33	49	66	82	99	155	132	148	165
16mm	Horizontal axis (H)	_	28	56	83	111	139	167	195	222	250	278
	Vertical axis (V)	_	18	35	53	71	89	106	124	142	160	177
	FOV	_	_	23	34	46	57	68	80	91	103	114
25mm	Horizontal axis (H)	_	_	38	58	77	96	115	134	154	173	192
	Vertical axis (V)	_	_	25	37	49	61	74	86	98	110	123

E-11 **Autonics**

■ Vision Sensor Program [Vision Master]

Vision Master is the vision sensor program that allows setting of vision sensor parameters and management of monitoring data such as inspection status and status information.

<Computer specification for using software>

Item	Minimum specifications
System	32bit (×86) or 64bit (×64) processor over 1GHz
Operations	Microsoft Windows 7/8/10
Memory	1GB+
Hard disk	400MB+ of available hard disk space
VGA	Resolution: 1024×768 or higher
Others	RJ45 Ethernet port

<Vision Master execution screen>



XVision sensor is connected with Vision Master in Ethernet (TCP/IP) communication.

**For initial IP address of vision sensor, refer to the following table. Configure the network settings of vision sensor via Vision Master.

IP address	192.168.0.2		
Subnet mask	255.255.255.0		
Gateway	192.168.0.1		

<Inspection setting screen>




<Inspection executing screen>






<FTP transmission setting screen>



<Registered inspections in work group>




<Inspection status monitoring screen>

Inspecti	on Status					Reset S	Statistics
Number	Work Name	Result Value	Result	Pass/Fail	Operating Time(ms)	- Input Trigger	2.3%
1	Alignment 1	82 [X:377 Y:250 R:0.2]	0	103/0(100.0%)	562.72	Pass	103
2	Brightness 1	153	0	78/25(75.7%)	0.19	Fail	4352
3	Contrast 1	69	0	87/16(84.4%)	1.02	- Work	46.6%
4	Area 1	5179	0	87/16(84.4%)	0.37	All Pass	48
5	Edge 1	0 [Distance:8]	0	94/9(91.2%)	9.63	One or More Failure	55
6	Length 1	0	0	89/14(86.4%)	0.82	The Number of Works	9
7	Angle 1	100	0	100/3(97.0%)	23.00	Overall Inspection Time(ms)	728
8	Diameter 1	68 [Round:88]	0	100/3(97.0%)	86.24	7	
				817/110(88.1%)	694.26		

E-12 Autonics

Vision Master Work Flow



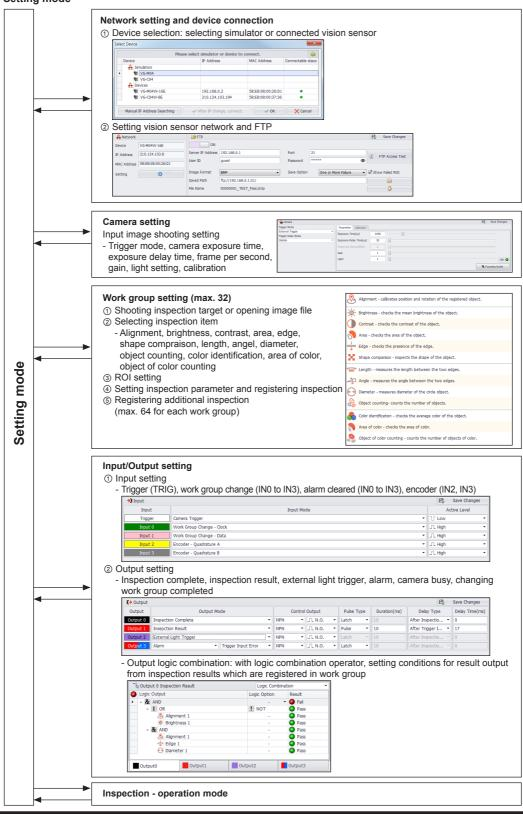

CONTROLLERS

MOTION DEVICES

SOFTWARE

(A) Photoelectric Sensors

Fiber Optic Sensors (C) LiDAR

> (D) Door/Area Sensors

> > E) ision ensors

(G) Pressure Sensors


Proximity

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

O Vision Master Work Flow

Operation mode

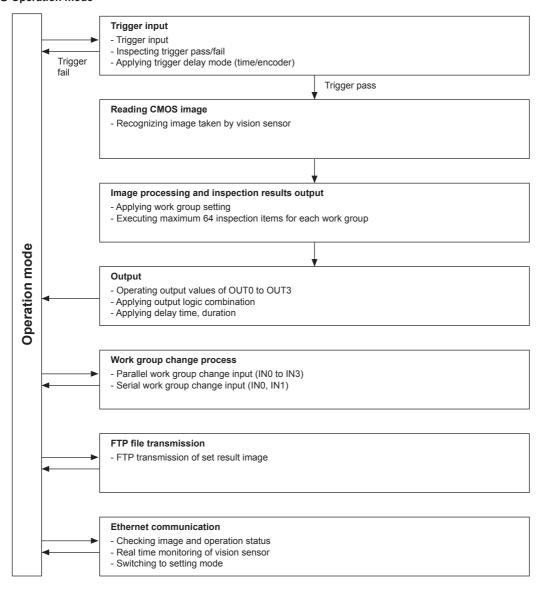


E-14 Autonics

Inspection function

○ Inspection fu	1						
Item	Description			SENSORS			
	Compares features of the registered image and input image to search for a similar pattern position, and inspects the input image with information of the searched pattern position and rotation angle.						
	<template></template>	<pass></pass>	<fail></fail>	CONTROLLERS			
Alignment	Solution of the state of the st	VG-Henry		MOTION DEVICES			
	Inspects brightness of the BOL in the	e innut image based on the most b	originations value of the POL (Posice of				
	Interest) in the registered image.	o imput image based on the mean t	orightness value of the ROI (Region of				
-Ø-	<template></template>	<pass></pass>	<fail></fail>	(A) Photoelectric Sensors			
Brightness				(B) Fiber Optic Sensors			
	Inspects contrast of the ROI in the inp	ut image based on contrast of the RC	I In the registered image.	(C) LiDAR			
	<template></template>	<pass></pass>	<fail></fail>	(D) Door/Area Sensors			
Contrast	<u>Autonics</u>	ssinotuA	<u>ludnics</u>	(E) Vision Sensors			
	Inspects the ROI area of the input ima	lage based on the ROI area of the ima	ge registered by user.	(F) Proximity Sensors			
	<template></template>	<pass></pass>	<fail></fail>				
				(G) Pressure Sensors			
Area	The street stree	To the same	I and I and I and I are the second and I are the second are the se	(H) Rotary Encoders (I) Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets			
	Inspects the direction of the edge in the	ne input image based on the edge reg					
Edge	<template> DISPOSABLE FA ALEDHOL SWEATCOHO SWAB</template>	Pass> To Pass> Sing Ordor of S	Seall Support of the state of t				
	Compares shape of object in the ROI	registered by user and that of the inp	ut image.				
	<template></template>	<pass></pass>	<fail></fail>				
Shape comparison							

Autonics E-15


VG Series

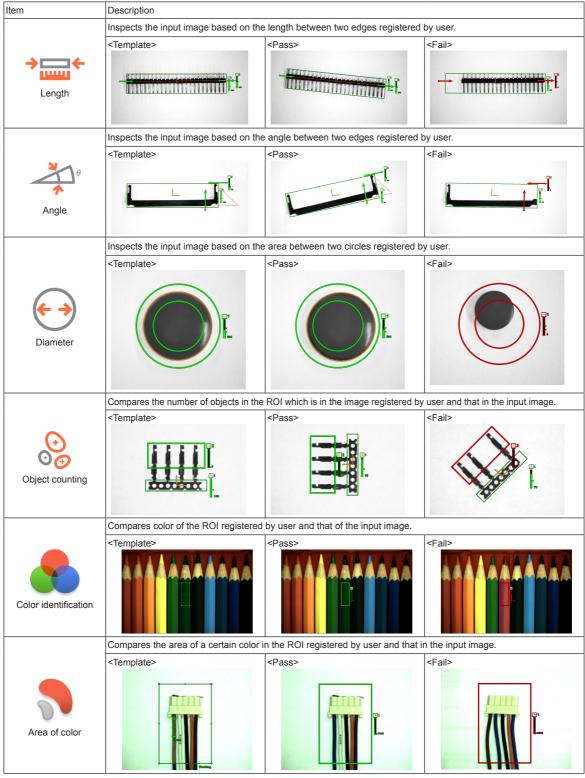

**These examples include position alignment. (except area, diameter, color identification, area of color, and object of color counting inspection)

Color identification, area of color, and object of color counting are only for VG-C Series.

Inspection function

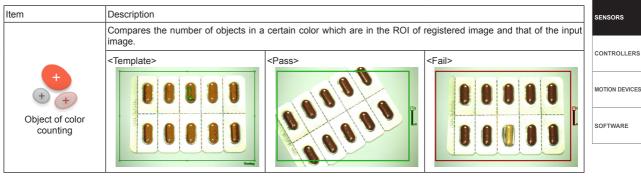

**These examples include position alignment. (except area, diameter, color identification, area of color, and object of color counting inspection)

**Color identification, area of color, and object of color counting are only for VG-C Series.

Proper Usage

O Cautions during Use

- Follow instructions in Cautions during Use. Otherwise, it may cause unexpected accidents.
- 24VDC power supply should be insulated and limited voltage/current or Class 2, SELV power supply device.
- In order to avoid malfunction from static electricity or noise, ground shield wire of the power I/O cable.
- Do not disconnect the power supply while setting operation or saving set information.
 It may cause data loss.
- Do not disconnect the power supply while updating firmware. It may cause product damage.
- Keep optical section of the sensor away from the contact with water, dust and oil.
 It may cause malfunction.
- When changing the light or filter, use the assembly tool and observe installation instruction.
- When the sensor is not used for a long time, separate the power cable to store.
- When connecting network, connection must be operated by technical expert.
- In the following case, disconnect the power supply immediately. It may cause fire or product damage.
 - When water or foreign substance is detected in the product
 - ② When the product is dropped or case is damaged
 - 3 When smoke or smell is detected from the product
- Do not use the product in the place where strong magnetic field or electric noise is generated.
- This unit may be used in the following environments.
 - ① Indoor (in the environment conditions in specifications)
 - ② Altitude max. 2,000m
 - 3 Pollution degree 2
 - Installation category II

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

(C) LiDAR

(D) Door/Area Sensors

> E) /ision Sensors

Proximity Sensors

(G) Pressure Sensors

(H) Rotary Encoders

Connectors/ Connector Cables/ Sensor Distribution Boxes/ Sockets

Autonics E-17